


How install the driver in Windows 8.1(2014/4/24)

1. Instruction in text


Start Windows 8, and follow the below steps,

1. Press **[Win]+[I]**, the setting panel will display
2. Click **"Change PC settings"**
3. Click **"Update and recovery"** and choses **"Recovery"** and chose **"Advance Startup"** Click **"Restart now"**
4. Click **"Troubleshoot"**
5. Click **"Advanced options"**
6. Click **"Startup Settings"**
7. Click **"Restart"**
8. The PC will restart, and press numbers key **"7"** to choose **"Disable driver signature enforcement"**
9. Install the driver accordingly


-
1. Press **[Win]+[I]**, the setting panel will display


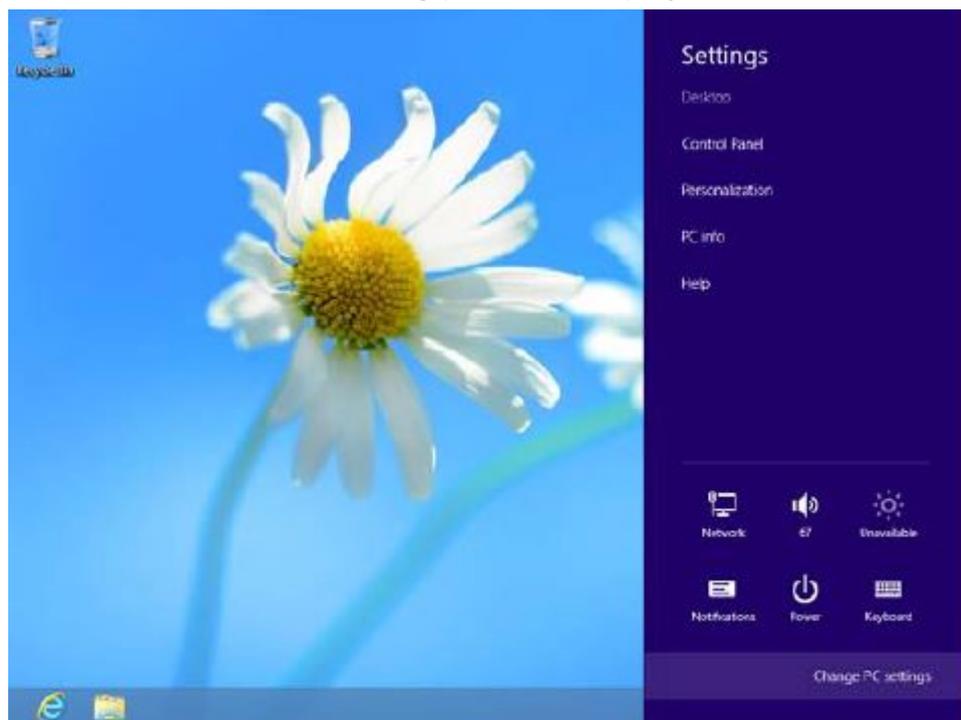



2. Click **"Change PC settings"**

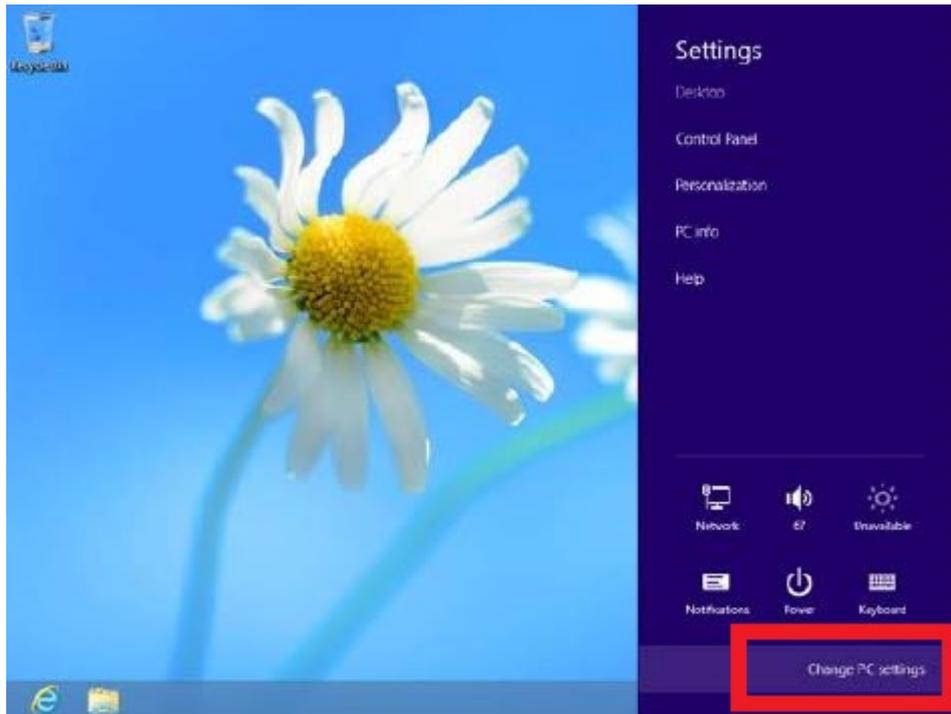

 
3. Click "Update and recovery" and choose "Recovery" then choose "Advance Startup" Click "Restart now"

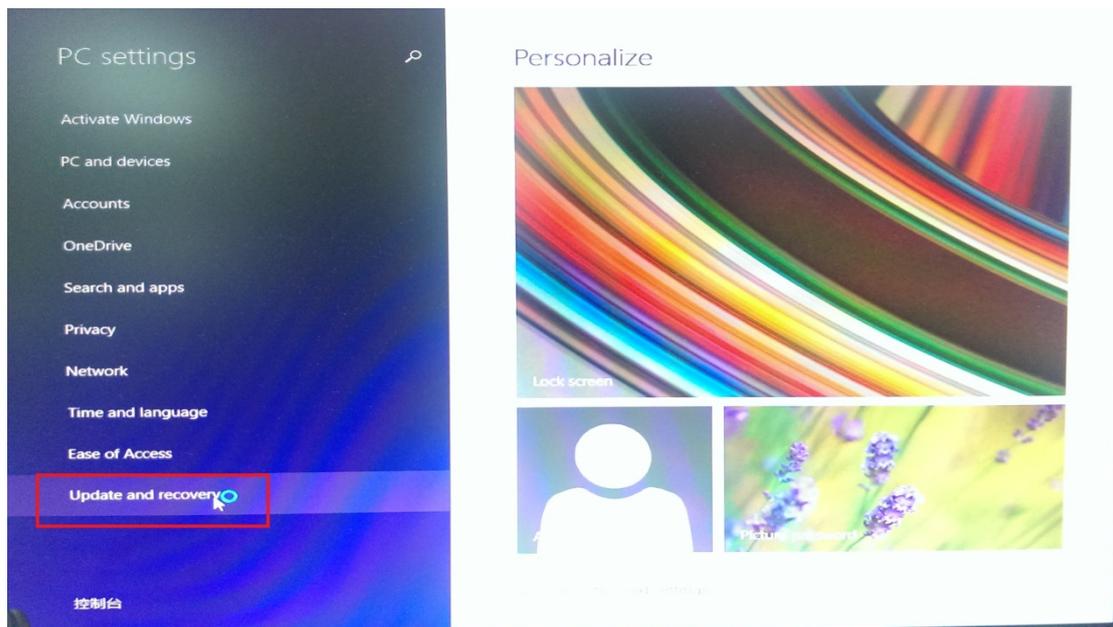

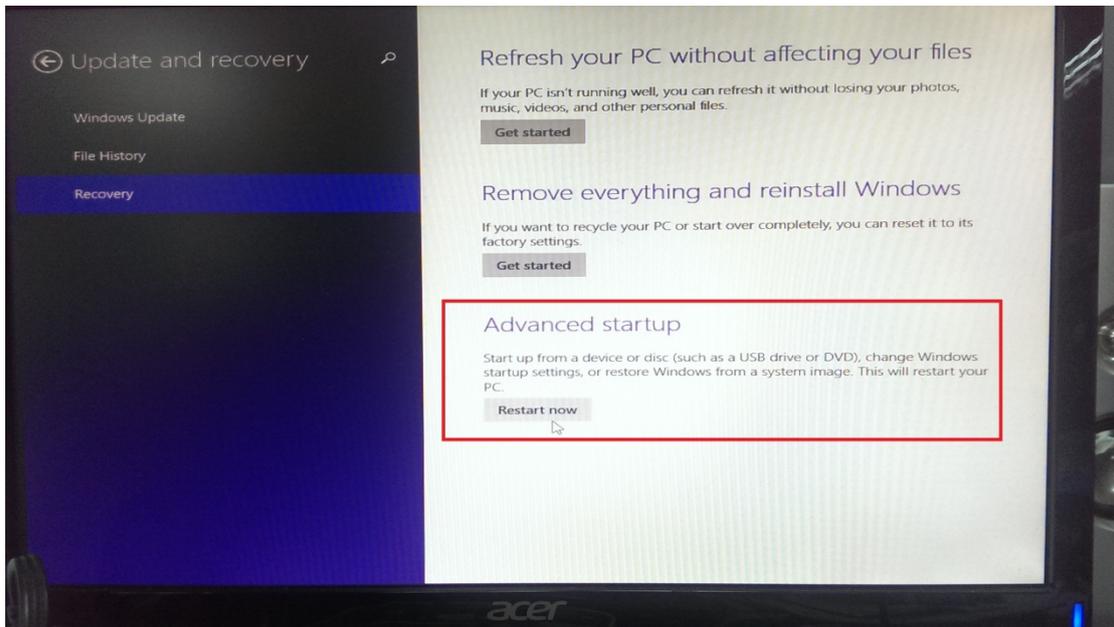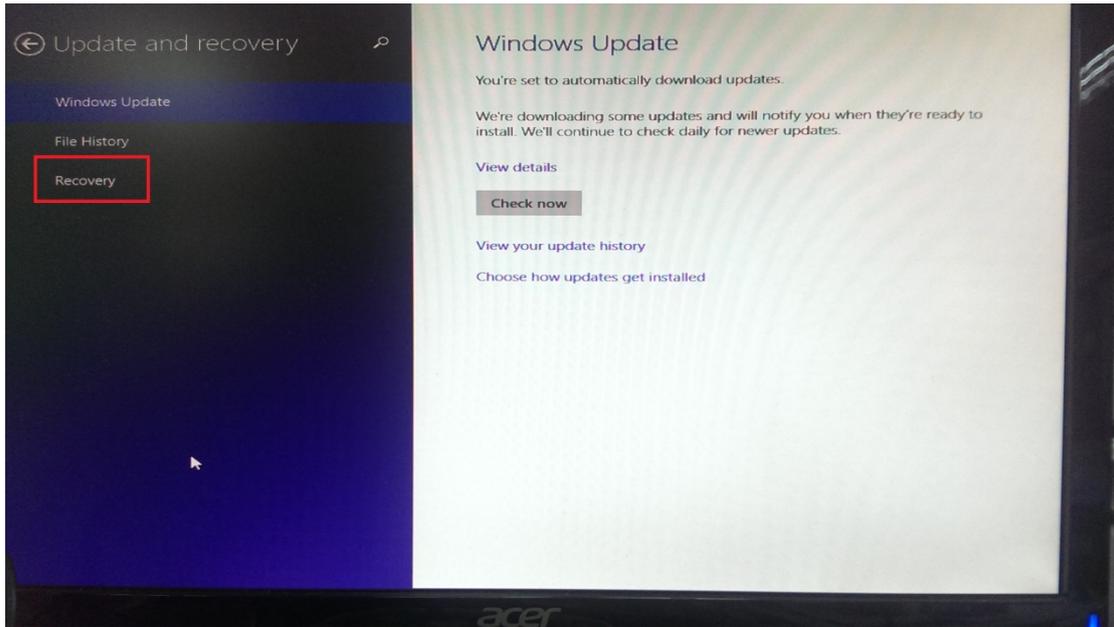





4. Click "Troubleshoot"

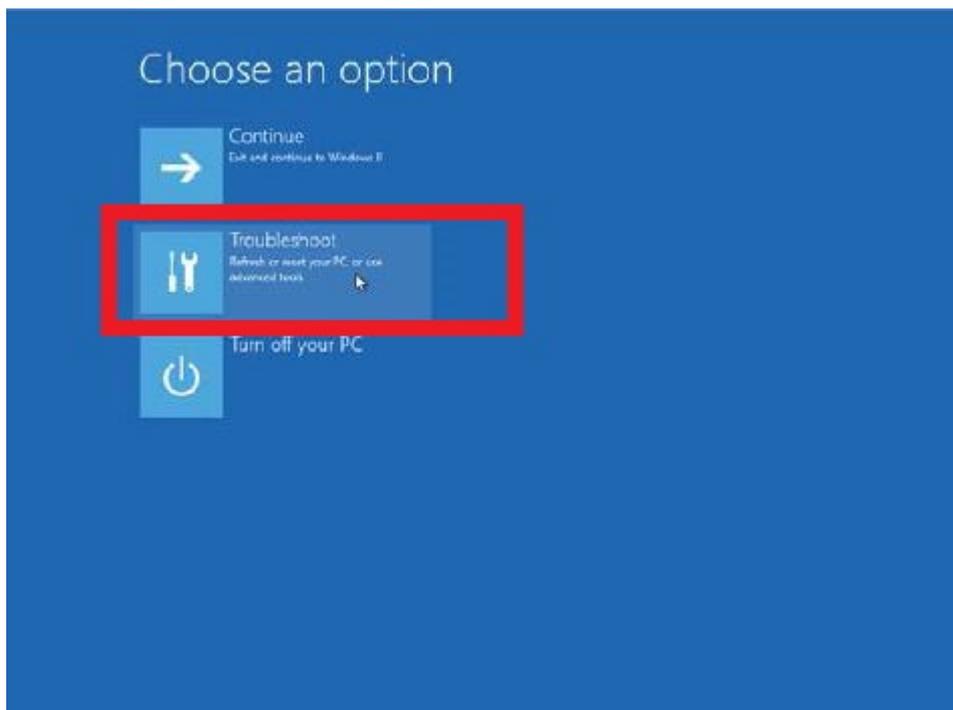


5. Click "Advanced options"

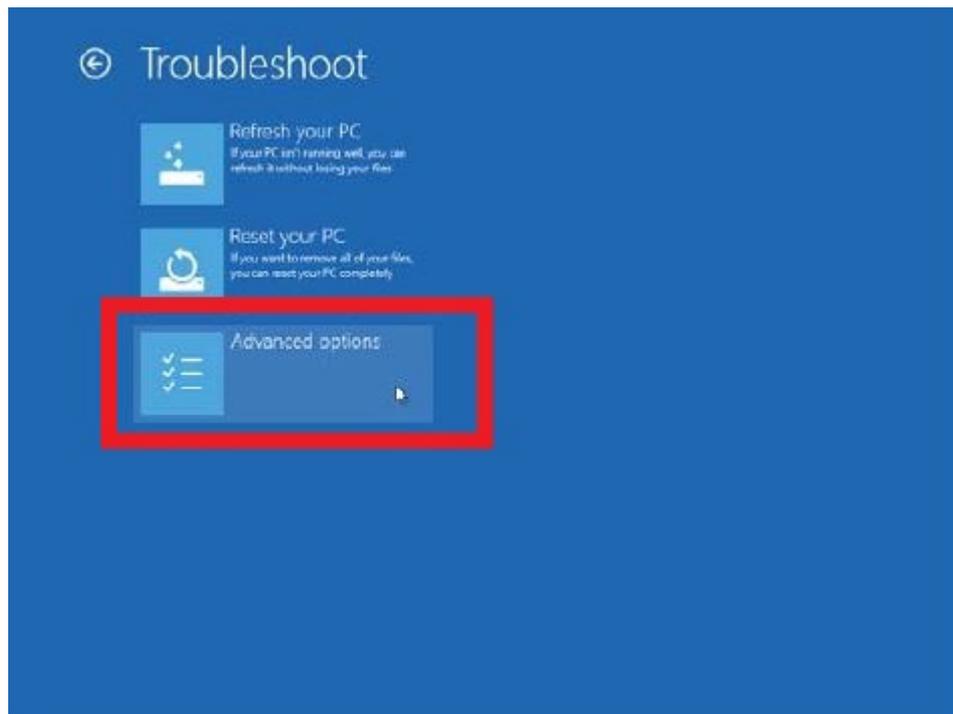


6. Click "Startup Settings"

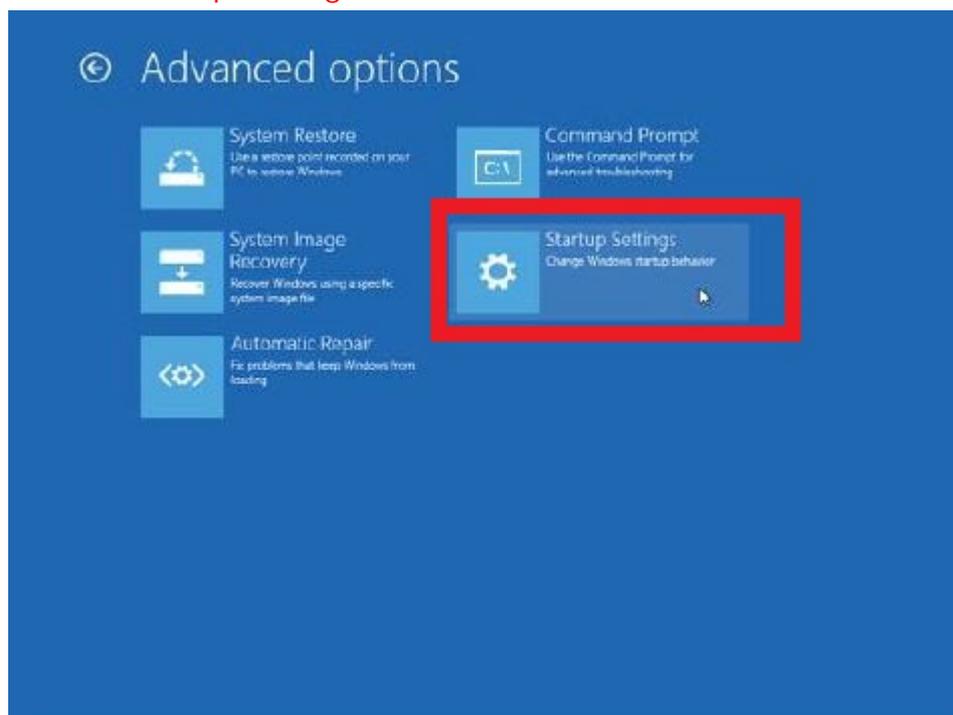

7. Click "Restart"

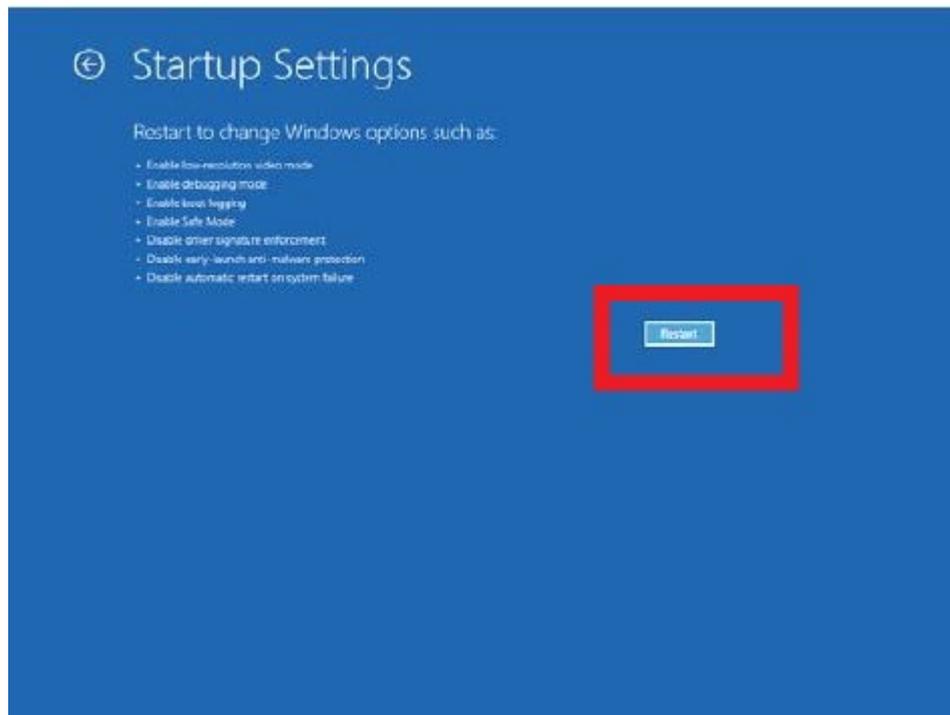

8. The PC will restart, and press numbers key "7" to choose "Disable driver signature enforcement"

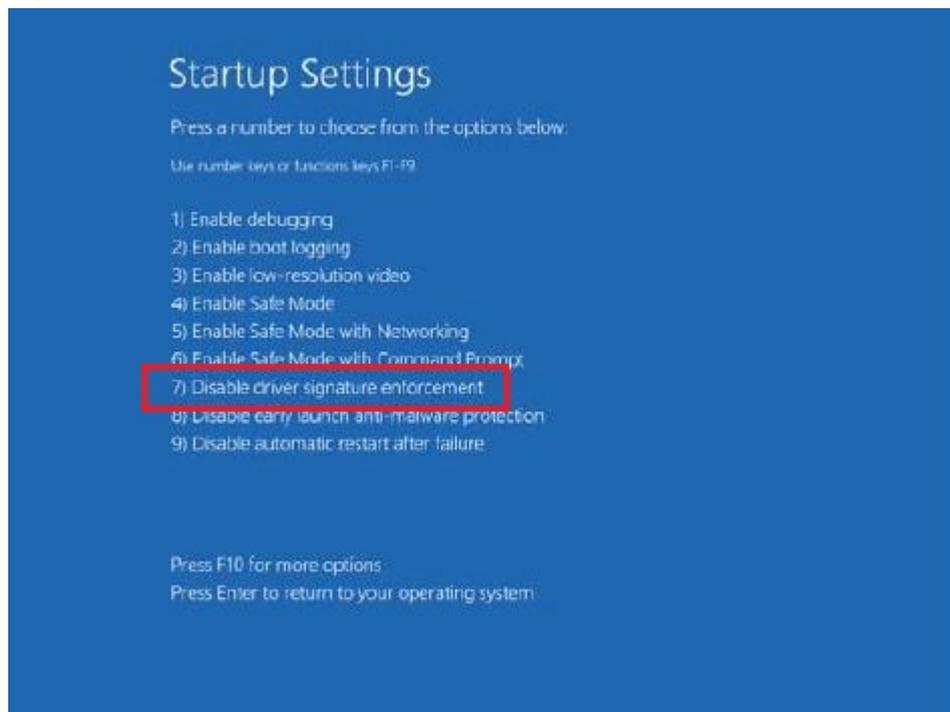

9. Then can Install the driver accordingly

